

**8W-63 POWER SEATS**

<b>Component</b>	<b>Page</b>	<b>Component</b>	<b>Page</b>
Circuit Breaker 2 .....	8W-63-2, 3	Heated Seat Relay .....	8W-63-5, 7
Driver Heated Seat Cushion .....	8W-63-6, 8	Joint Connector No. 5 .....	8W-63-5, 7
Driver Heated Seat Switch .....	8W-63-5	Joint Connector No. 8 .....	8W-63-5, 7
Driver Lumbar Motor .....	8W-63-3	Junction Block .....	8W-63-2, 3, 5, 7
Driver Power Seat Front Vertical Motor ...	8W-63-2, 3	Passenger Heated Seat Cushion .....	8W-63-4, 6, 8
Driver Power Seat Horizontal Motor ...	8W-63-2, 3	Passenger Heated Seat Switch .....	8W-63-7
Driver Power Seat Rear Vertical Motor ...	8W-63-2, 3	Passenger Lumbar Motor .....	8W-63-4
Driver Power Seat Switch .....	8W-63-2, 3	Passenger Power Seat Front Vertical Motor.	8W-63-4
Fuse 1 (JB) .....	8W-63-5, 7	Passenger Power Seat Horizontal Motor ...	8W-63-4
Fuse 2 (JB) .....	8W-63-5, 7	Passenger Power Seat Rear Vertical Motor ...	8W-63-4
G201 .....	8W-63-5, 7	Passenger Power Seat Switch .....	8W-63-4
G300 .....	8W-63-3, 4, 6, 8	Seat Heat Interface Module .....	8W-63-5, 6, 7, 8
G301 .....	8W-63-2		









