


STEP 1: There are five dashboard connecting screws that hold the dash to the upper firewall. Remove these screws using an 8mm nut driver or power tool.



STEP 2: To install the reinforcements, use the positioning diagram in the photo below. (DO NOT OVERTIGHTEN!)

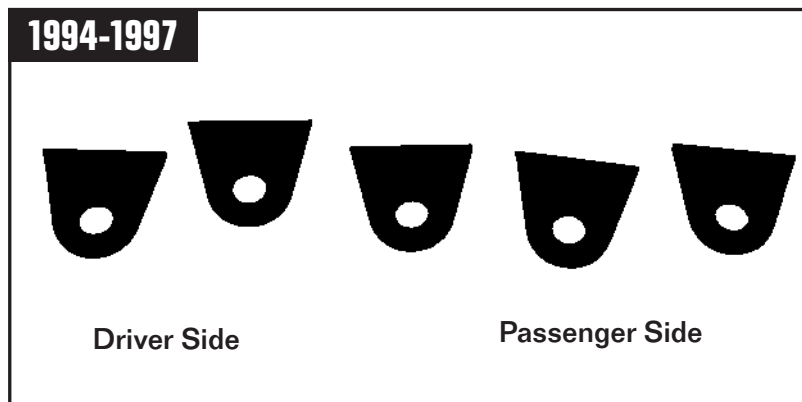

STEP 3: Good work! The reinforcement tabs help spread the clamp load and, hopefully, will keep dashboard cracks from happening.



If you need more assistance, we are only a phone call away.

(770) 886-2500

Monday-Friday
8:30am-5:30pm EST

GENO'S GARAGE, INC.
1150 Samples Industrial Drive
Cumming, Georgia 30041