## **BATTERY CABLE SPLICING**

## PART NO. BAT-DDG25KIT


## 1998.5-2002 DODGE RAM CUMMINS TURBO DIESEL TRUCKS

The right side negative cable for the 1998.5-2002 Dodge Ram Diesel is not an exact bolt in replacement so you will need to splice into the existing wiring to correctly install.

The right side factory negative cable has a small wire that goes to a couple of gray connectors. You will need to cut the wires going to these connectors and splice them to the new wires.

This cable kit is shipped with the wires and splices so you can make the connection. A standard hand-tool wire crimper should work fine on the included 8-gauge wire.

Below is a schematic view of the cable:

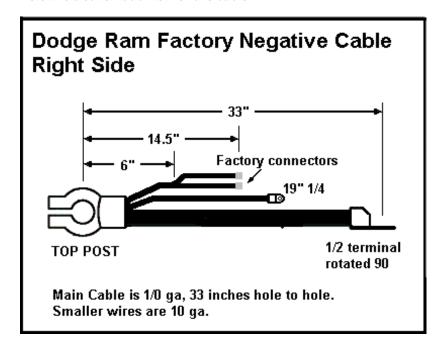

To the right is a picture of the actual Dodge Ram battery cable:



Below is a detail of the connector on the Dodge Ram battery cable:



Here is what it looks like with connections to new wire completed:





Questions? We're only a phone call away.

Monday-Friday 8:30AM-5:30PM EST

770-886-2500

**GENO'S GARAGE** 

1150 Samples Industrial Drive Cumming, GA 30041 www.genosgarage.com