



Universal OBD II Port Lock


To Install:

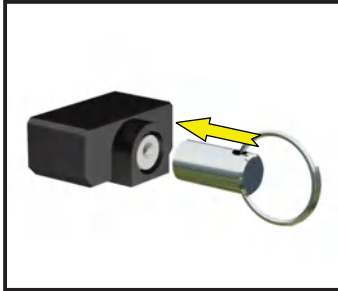


- Align the Secure Key over the Secure Screw head and slip it on.

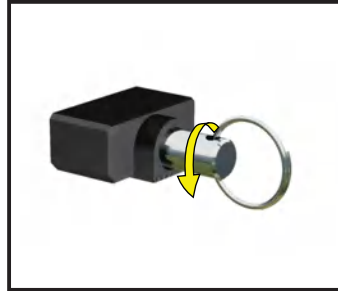


- Turn the Secure Key counterclockwise two full revolutions so that the Locking Finger is loose.

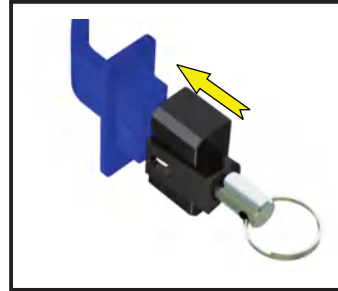

- Slide the unit over the OBD II port.

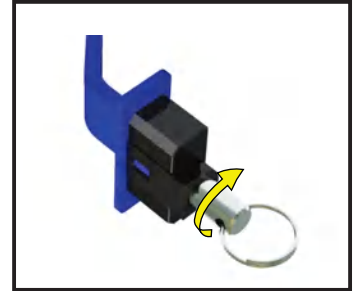


- Turn the Secure Key clockwise until tight.

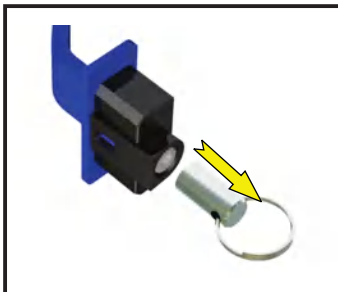


- Remove the Secure Key.


To Remove:

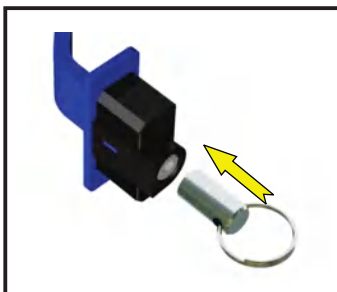


- Align the Secure Key over the Secure Screw head and slip it on.

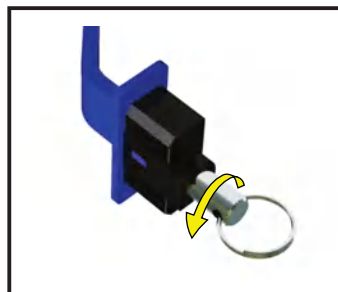

- Turn the Secure Key counterclockwise two full revolutions so that the Locking Finger is loose.

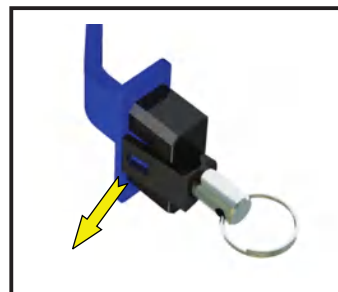

- Disengage the Locking Finger from the lug on port.

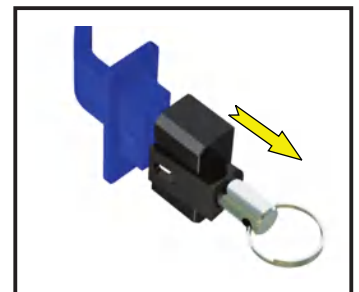

- Remove Universal Tune Saver from the OBD II Port.

Lightly tightening the Secure Screw is enough to ensure the system is secure and an easy-to-unlock unit for the future.